


townew

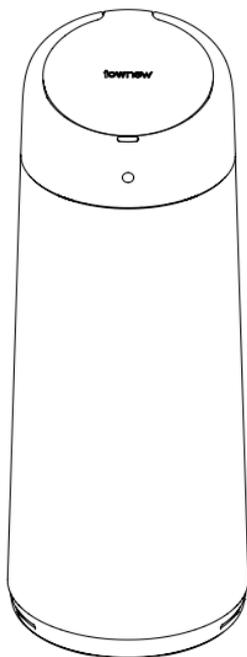

TT

Smart TT storage robot specialized for handling of baby, adult diapers and pet feces and other garbage.

Important Safety Instructions

Read all instructions before using this appliance and save them for future reference.





1. This appliance is intended for household and indoor use only.
2. Only use the appliance for its intended purpose to avoid potential hazard or injury.
3. If necessary, clean the plastic surfaces with a damp cloth.
4. Never immerse the appliance in water or any other liquid, nor rinse it under the tap.
5. Turn off the power when the appliance is not in use.
6. Do not press or force the lid to close.
7. Do not open the lid or cover manually when it is sealing.
8. Do not place flammable, explosive or burning/smoking objects in the appliance.
9. Charge the appliance only with a specified adapter with required safety certificates, to avoid fire, electric shock or personal injury.
10. Do not attempt to repair the appliance yourself, otherwise your warranty may become invalid.
11. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are given supervision or instruction concerning use of the appliance by a

- person responsible for their safety.
12. Children aged 8 and below should not operate this product. Ensure that children do not use this product as a toy.
 13. This appliance contains batteries that are only replaceable by skilled persons.
 14. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
 15. Children shall not play with the appliance.
 16. Cleaning and user maintenance shall not be made by children without supervision.
 17. This product should be placed on a flat, level surface.
 18. This product contains coconut shell activated carbon. Ensure that children do not play with the charcoal bag to prevent them from accidentally eating it.
 19. Keep children from playing with the trash bags to avoid accidental suffocation.

Basic Parameters

Item	Parameter
Capacity	16.7 L
Battery	11.1V 2000 mAh
Charging time	10 hours
Power adapter	DC 5V 2A

Product Overview

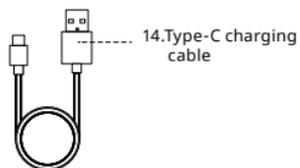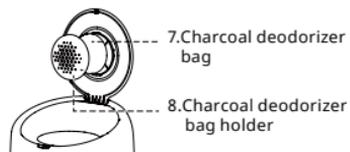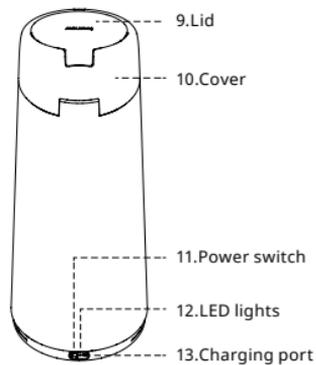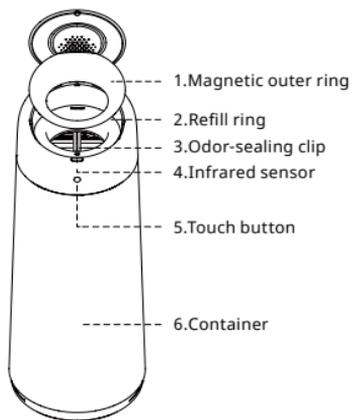

Instructions for Use

First Use

Step1: Fully charge the product before first use. Make sure the power switch is ON (I) while charging.

Step 2: Hold the Touch button until you hear two beep sounds, a trash bag is automatically placed inside the trash can. Now, it is ready to use.

Auto Mode

When an object enters within a 20 cm range above the sensor panel, the lid and odor-sealing clip will open at the same time. When the object is removed, the lid and odor-sealing clip will close automatically.

Open-Lid Mode

Tap the Touch button, the lid and odor-sealing clip will open at the same time after a beep, the appliance enters Open-Lid mode. Tap the Touch button again, the appliance will return to Auto mode.

Trash Bag Auto Sealing and Auto Replacing

Hold the Touch button until you hear two beep sounds, the appliance automatically seals the trash bag. Remove the sealed trash bag after the cover opens automatically. After the cover closes automatically, a new trash bag will be replaced inside the appliance.


Charging

Continuous beeps will be heard when the battery level is low. Charge the appliance with a specified adapter (Input: 5V / 2A). Make sure the power switch is ON while charging. While charging, the LED indicator becomes solid on; when fully charged, it goes off.


Replacing the Refill Ring




1. Switch to Open-Lid mode

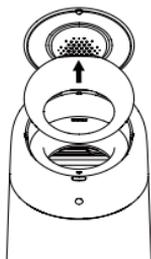

2. Remove the magnetic outer ring

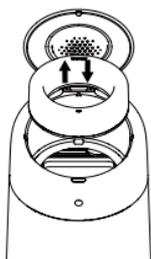


3. Replace the refill ring

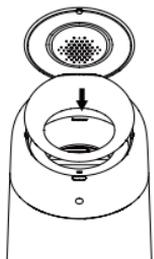

4. Put the magnetic outer ring back



5. Switch to Auto mode

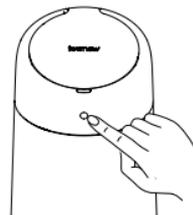

6. Hold the Touch button, a new trash bag will be automatically placed inside the can.

*Purchase and use townew's patented refill ring

Replacing the charcoal deodorizer bag

EN



1. Switch to Open-Lid mode



2. Rotate the charcoal deodorizer bag holder anticlockwise



3. Replace the charcoal deodorizer bag



4. Rotate clockwise to tighten the charcoal deodorizer bag holder



5. Switch to Auto mode

Troubleshooting

Problem	Solution
Functional error	Check whether you are using a townew's patented refill ring and whether it is correctly placed in the product
Sealing error	Check whether the bag sealing area is blocked and remove any blockages in a timely manner
Auto sensing error	Tap the Touch button to check if the appliance is in Open-Lid mode.
Touch button error	Turn off the appliance, and restart after 10 seconds.
Bag replacing error	Remove waste inside the trash can, it could block the sensing unit.

Recycling

Do not dispose of the product with other household waste at the end of its service life. Follow your country's rules on separate collection of electrical and electronic products. The correct disposal will help prevent negative consequences for the environment and human health.

Warranty

The warranty contained herein only applies to purchases made from authorized dealers or distributors of townew. We offer a 1-year limited warranty against original defects in materials and craftsmanship of the appliance. The warranty period is 1 year from the date of purchase. Warranty claims must be accompanied by a receipt showing original date of purchase.

If during this warranty period a defect arises, we will either repair the appliance using new parts, replace the appliance with a new appliance, or refund the purchase price of the appliance.

If you wish to submit a warranty claim, please contact your retailer and include your details, a scanned copy of the original receipt and description of the defects.

This warranty does not apply to

1. Appearance damage including scratches, dents and plastic wearout, etc.
2. Defects or damage due to misuse, accident (including but not limited to collision, fire and the spillage of food or liquid), neglect, abuse, alteration, unusual stress, modification, improper or unauthorized repair, installation, testing, or improper storage.
3. Damage due to use of the appliance other than for permitted or intended purposes.
4. Normal wear and tear.
5. Reduction in battery discharge time due to battery age or use.

Disclaimer

This user manual is for reference only and does not constitute any form of commitment. To the extent permitted by law, this warranty and the remedies set forth are exclusive and in lieu of all other warranties, remedies and conditions, whether oral, written, statutory, express or implied. townew disclaims all statutory and implied warranties, including without limitation, warranties of merchantability and fitness for a particular purpose and warranties against hidden or latent defects, to the extent permitted by law. In so far as such warranties cannot be disclaimed, townew limits the duration and remedies of such warranties to the duration of this express warranty and, at townew option, the repair or replacement services described above. Some states (countries and provinces) do not allow limitations on how long an implied warranty (or condition) may last, so the limitation described above may not apply to you. townew does not warrant uninterrupted or error free operation of the trash can. The Warranty remedies expressly provided herein will be consumer sole and exclusive remedies.

